

Table 1

Vehicle / Years	Distributor Number	Points	Condenser	Distributor Cap	Ignition Rotor Number
SVDA	0 231 170 034 Genuine Bosch 034 (Please note this info does NOT apply to any of the Chinese clones of any brand name, ie: Hot Spark, Kuhitek, etc)	01-011 (Regular <6K RPM) or 01-030 (>6K RPM) or Pertronix 1847V (electronic points replacement) or Pertronix II 91847V (Electronic points replacement w/burnout safety)	02-054 (Round Hole) or 02-086 (Square Hole)	03-010 (Red) or 03-172 (Black)	04-033 (Regular) or 04-016, 04-021, 04-022, 04-023, 04-024, 04-028, 04-030 (Rev Limiting)
Bosch 034 Do NOT trust this chart for Chinese 034 clones.	0 231 170 034AKA: "034" SVDA Distributor	01-011 (Regular <6K RPM) or 01-030 (>6K RPM) or Pertronix 1847V (electronic points replacement) or Pertronix II 91847V (Electronic points replacement w/burnout safety)	02-054	03-010 (Red) or 03-172 (Black)	04-033 (Regular) or 04-016, 04-021, 04-022, 04-023, 04-024, 04-028, 04-030 (Rev Limiting)
009 Centrifugal ONLY 1950-1974 *Without RPM Limiting Rotor	0 231 178 009 0 231 081 094 (Chrome 009)	01-011 (Regular <6K RPM) or 01-030 (>6K RPM) or Pertronix 1847V (electronic points replacement) or Pertronix II 91847V (Electronic points replacement w/burnout safety)	02-086	03-010 (Red) or 03-172 (Black)	04-033 (Regular) or 04-016, 04-021, 04-022, 04-023, 04-024, 04-028, 04-030 (Rev Limiting)
Type 1 1974-1979	0 231 170 034 0 231 170 036 0 231 176 028 0 231 176 033 0 231 176 044 0 231 176 053	01-011 (Regular <6K RPM) or 01-030 (>6K RPM) or Pertronix 1847V (electronic points replacement) or Pertronix II 91847V (Electronic points replacement w/burnout safety)	02-074	03-010 (Red) or 03-172 (Black)	04-033 (Regular) or 04-016, 04-021, 04-022, 04-023, 04-024, 04-028, 04-030 (Rev Limiting)
Type 1 1971-1973 Manual Trans	0 231 167 012 0 231 167 049 0 231 167 053 0 231 167 049 0 231 167 070	01-011 (Regular <6K RPM) or 01-030 (>6K RPM) or Pertronix 1847V (electronic points replacement) or Pertronix II 91847V (Electronic points replacement w/burnout safety)	02-054	03-010 (Red) or 03-172 (Black)	04-033 (Regular) or 04-016, 04-021, 04-022, 04-023, 04-024, 04-028, 04-030 (Rev Limiting)
Type 1 1970-1973 Autostick Trans	0 231 167 012 0 231 167 049 0 231 167 053 0 231 167 070	01-011 (Regular <6K RPM) or 01-030 (>6K RPM) or Pertronix 1847V (electronic points replacement) or Pertronix II 91847V (Electronic points replacement w/burnout safety)	02-054	03-010 (Red) or 03-172 (Black)	04-033 (Regular) or 04-016, 04-021, 04-022, 04-023, 04-024, 04-028, 04-030 (Rev Limiting)
Type 1 1969-1970 Manual Trans	0 231 137 035 0 231 137 036	01-013 or Pertronix 1847V (electronic points replacement) or Pertronix II 91847V (Electronic points replacement w/burnout safety)	02-069	03-010 (Red) or 03-172 (Black)	04-033 (Regular) or 04-016, 04-021, 04-022, 04-023, 04-024, 04-028, 04-030 (Rev Limiting)
Type 1 1969 Autostick Trans	231115078	01-011 (Regular <6K RPM) or 01-030 (>6K RPM) or Pertronix 1847V (electronic points replacement) or Pertronix II 91847V (Electronic points replacement w/burnout safety)	02-039	03-010 (Red) or 03-172 (Black)	04-033 (Regular) or 04-016, 04-021, 04-022, 04-023, 04-024, 04-028, 04-030 (Rev Limiting)
Type 1 1968 Manual Trans	231137021	01-013 or Pertronix 1847V (electronic points replacement)	02-069	03-001	04-006
Type 1 1968 Autostick Trans	231115056	01-011 (Regular <6K RPM) or 01-030 (>6K RPM) or Pertronix 1847V (electronic points replacement) or Pertronix II 91847V (Electronic points replacement w/burnout safety)	02-039	03-001	04-006
Type 1 1965-1967	231137009	01-009 or Electronic points replacements: Pertronix 1849N6 (6V) or Pertronix 1849 (12V)	02-069	03-001	04-006
Type 1 1965	231137005	01-009 or Electronic points replacements: Pertronix 1849N6 (6V) or Pertronix 1849 (12V)	02-007	03-001	04-006
Type 1 1961-1964	231139005	01-006 or Electronic points replacements: Pertronix 1849N6 (6V) or Pertronix 1845 (12V)	02-006	03-037	04-006
Type 1 1946-1974	9230081094	01-011 (Regular <6K RPM) or 01-030 (>6K RPM) or Electronic points replacement: Pertronix 1847V or Pertronix II 91847V (Electronic points replacement w/burnout safety)	02-086	03-010 (Red) or 03-172 (Black)	04-033 (Regular) or 04-016, 04-021, 04-022, 04-023, 04-024, 04-028, 04-030 (Rev Limiting)
Type 2 1974-1979	0 231 181 003 0 231 181 005 0 231 181 007 0 231 181 012 0 140 231 176 0 140 231 048 0 140 231 176 0 140 231 055	01-011 (Regular <6K RPM) or 01-030 (>6K RPM) or Electronic points replacement: Pertronix 1847V or Pertronix II 91847V (Electronic points replacement w/burnout safety)	02-074	03-010 (Red) or 03-172 (Black)	04-033 (Regular) or 04-016, 04-021, 04-022, 04-023, 04-024, 04-028, 04-030 (Rev Limiting)
Type 2 1974 and 1976-1978	231170093	01-052 or Electronic points replacement: Pertronix 1847V or Pertronix II 91847V (Electronic points replacement w/burnout safety)	02-074	03-010 (Red) or 03-172 (Black)	04-033 (Regular) or 04-016, 04-021, 04-022, 04-023, 04-024, 04-028, 04-030 (Rev Limiting)
Type 2 1972-1973	0 231 173 005 0 231 173 007 0 231 173 009	01-011 (Regular <6K RPM) or 01-030 (>6K RPM) or Electronic points replacement: Pertronix 1847V or Pertronix II 91847V (Electronic points replacement w/burnout safety)	02-071	03-010 (Red) or 03-172 (Black)	04-033 (Regular) or 04-016, 04-021, 04-022, 04-023, 04-024, 04-028, 04-030 (Rev Limiting)
Type 2 1971	0 231 173 001 0 231 167 055	01-011 (Regular <6K RPM) or 01-030 (>6K RPM) or Electronic points replacement: Pertronix 1847V or Pertronix II 91847V (Electronic points replacement w/burnout safety)	02-054	03-010 (Red) or 03-172 (Black)	04-033 (Regular) or 04-016, 04-021, 04-022, 04-023, 04-024, 04-028, 04-030 (Rev Limiting)
Type 2 1969-1970	231137035	01-013 or Electronic points replacement: Pertronix 1847V or Pertronix II 91847V (Electronic points replacement w/burnout safety)	02-069	03-010 (Red) or 03-172 (Black)	04-033 (Regular) or 04-016, 04-021, 04-022, 04-023, 04-024, 04-028, 04-030 (Rev Limiting)
Type 2 1968	231137021	01-013 or Electronic points replacement: Pertronix 1847V or Pertronix II 91847V (Electronic points replacement w/burnout safety)	02-069	03-001	04-006
Type 2 1966-1967	0 231 137 009 0 231 137 011	01-009 or Electronic points replacements: Pertronix 1849N6 (6V) or Pertronix 1849 (12V)	02-069	03-001	04-006
Type 2 1964-1965	0 231 147 002 0 231 137 005	01-009 or Electronic points replacements: Pertronix 1849N6 (6V) or Pertronix 1849 (12V)	02-007	03-001	04-006
Type 2 1961-1964	0 231 139 002 0 231 139 005	01-006 or Electronic points replacements: Pertronix 1849N6 (6V) or Pertronix 1845 (12V)	02-006	03-037	04-010
Type 3 1972-1973	0 231 163 027 0 231 163 029	01-011 (Regular <6K RPM) or 01-030 (>6K RPM) or Electronic points replacement: Pertronix 1847V or Pertronix II 91847V (Electronic points replacement w/burnout safety)	02-054	03-001	04-006
Type 3 1968-1971	0 231 163 018 0 231 163 016 0 231 163 008 0 231 163 003 0 231 163 001	01-011 (Regular <6K RPM) or 01-030 (>6K RPM) or Electronic points replacement: Pertronix 1847V or Pertronix II 91847V (Electronic points replacement w/burnout safety)	02-039	03-001	04-006
Type 3 1967	231137015	01-009 or Electronic points replacement: Pertronix 1849 (12V) or Pertronix 1849N6 (6V)	02-069	03-001	04-006
Type 3 1966	231137005	01-009 or Electronic points replacements: Pertronix 1849N6 (6V) or Pertronix 1849 (12V)	02-007	03-001	04-006